

HUROM

BL-D01 SERIES

INSTRUCTION

MANUAL

- 02 Precautions for Safe Use
- 05 Structure of Product and Names of Parts
- 06 Product Specification / Warranty Card
- 07 How to Assemble
- 08 How to Use
- 09 - 10 Before Requesting Product Repair

- 01 Make sure to read the Precautions for Safe Use (p. 02) for accurate use of the product.
- 02 After reading it, please keep it in a place where people who use the product can access it at anytime.
- 03 The specifications of this product are subject to change without notice for quality improvement.

PRECAUTIONS FOR SAFE USE

● Precautions for Safe Use

1. Make sure to read <Precautions for Safe Use>.
2. Be sure to follow <Precautions for Safe Use>.
3. Precautions are classified as follows.



Warning Failure to comply with the label instructions may result in serious injury or death.



Caution Failure to comply with the label instructions may result in significant injury or product damage.

- ° Do not insert or pull the cord with wet hands. It may lead to an electric shock and/or injury.
- ° This product is exclusively for 230V. Connecting to a different voltage may shorten the motor's lifespan or lead to a malfunction.
- ° Securely insert the power cord all the way into an outlet. It may lead to an electric shock and/or fire.
- ° Do not forcibly bend, tie, damage, or pull the power cord. Do not place it near a high temperature or heat, such as a gas cooktop, and do not place any heavy object on top of it, wedge it into a narrow space, or alter it. It may damage the power cord and lead to a fire and/or electric shock.
- ° Do not remodel it under any circumstances. Also, do not attempt to dismantle or repair it yourself.
- ° Do not insert foreign objects, such as a finger or iron pin, into any gaps or holes in the product body. It may lead to a fire, electric shock, injury, and/or malfunction. For after-sales service and product maintenance, contact the Hurom Customer Center.
- ° When the power cord is damaged, do not repair or attempt to modify it yourself and, instead, contact the Hurom Customer Service Center for an inspection. It may lead to a fire, electric shock, and/or injury.
- ° Do not allow the product body to get wet or splash water over it.
- ° Make sure that no water or foreign material come into contact with the product's power switch.
- ° Do not control the switch with wet hands. It may lead to an electric shock and/or fire.
- ° Do not use several electric appliances simultaneously by plugging them all into a single multi-tab power strip or outlet. Please use a dedicated outlet. Do not move the product during operation or

insert hands, tools or anything other than ingredients into the container. It may lead to an injury, accident and/or malfunction.

- Do not use it within children's reach. Children should be carefully supervised so that they do not use this device for play. There is a risk of an injury or malfunction if children accidentally hit and knock it over.
- Those who are not familiar with the handling of this product should not use it when alone. Those who experience physical and/or mental discomfort, children, or those who lack experience and knowledge should use the product with a guardian.

● **Precautions Before Use**

- Make sure to use the product in the proper order instructed by the manual and, then, check if the product works properly.
- This product is designed in a way that it can be used only after assembling the blades and container. Do not operate it with only the blades in place. It may lead to a serious injury.
- Do not use it outdoors or for commercial purposes. This product is for household use.
- Use it in place with a level surface. It may lead to an injury and/or malfunction.

● **Precautions During Use**

- Do not use the product in a place with risks of fire or a high humidity level. It may lead to an electric shock, malfunction and/or fire.
- Before operating the product, check if liquid of ingredients leaks out from the container and through the blades. There is a risk of an injury from fire, electric shock and/or damage to the product.
- Do not use hot ingredients that are 60°C or higher in temperature. There is a risk of an injury from a burn, etc. caused by overflowing of the liquid.
- When taking out cooked ingredients from the container, use a tool such as a paddle. Insertion of hands may lead to an injury.
- If the motor stops and a loud, "whirring" sound of an idle run is heard during use, it means that large or tough ingredients are stuck on the blades, so be sure to remove them and cut them into smaller pieces before running the product again.
- Do not insert ingredients in excess of the rated capacity. It may overwork the motor and lead to a malfunction.
- Do not poke any gap or hole of the product with a chopstick, spoon or fork or insert any foreign

objects during use. It may lead to an injury and/or malfunction.

- ° While the product is in operation, do not lift the container or open the cover.
- ° Do not conduct any idle run of the product. It overheats the motor to shorten the product's lifespan and may also lead to a malfunction.
- ° Do not exert any excessive shock to or drop the product.. It may lead to an electric shock, damage and/or fire.
- ° The rubber smell generated during operation is not due to any problem with the device, so you can use it without any concern. In such cases, however, you should not use it continuously for longer than a minute.
- ° When grinding ingredients, use a small container (500ml).

● **Precautions After Use**

- ° Pull the power cord from the outlet at all times except when the product is in use. When the product is cleaned or not in use, make sure to pull the power cord after turning the power button off. Also, when pulling the power cord, make sure to grab the plug to pull it. Pulling by grabbing the cable may lead to a malfunction, injury, electric shock and/or fire.
- ° Detach the container after the operation finishes completely.
- ° Do not pour water on the product to wash it. It may lead to a malfunction of the motor or switch or an electrical accident.
- ° Do not insert the container, cover and other parts into hot water of 60°C or higher in temperature. It may lead to a deformation of or damage to the product.

● **Cleaning and Storage**

1. Wipe the product body with a damp towel or soft cloth.
2. All parts except the body of the blender can be washed and cleaned with water.
3. Make sure to rinse them thoroughly and dry them completely.
4. Be careful with blades during cleaning as they are extremely sharp.
5. Once cleaning finishes, make sure to install the blade assembly on the container again for storage.

※ **Do not use it continuously for longer than a minute.**


When it is used continuously, do not use it three or more times within one minute after continuous use.

STRUCTURE OF PRODUCT AND NAMES OF PARTS



Blades


Cover of portable tumbler

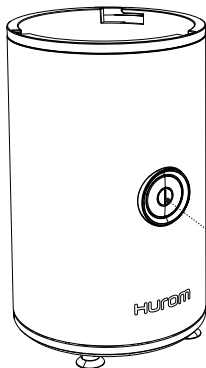

Body

**500ml container for
coffee grinder**


**700ml container for
food mixer**

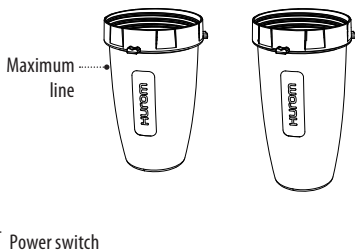


Maximum
line

Power switch


HOW TO ASSEMBLE

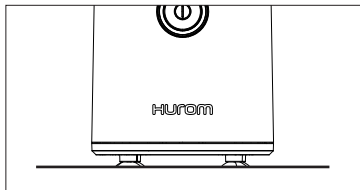


- ① Place the body on a level surface and in a way that the inlet faces upward.

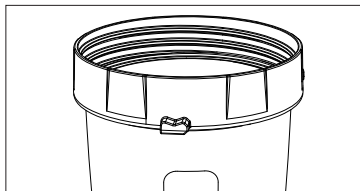

- ② Fill the container with ingredients to be blended. However, make sure not to exceed the maximum line marked on the container.

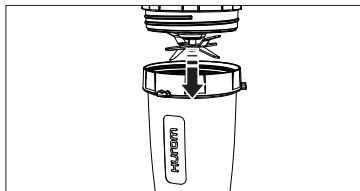


- ③ Fasten the blade assembly at the inlet of the container and close it.

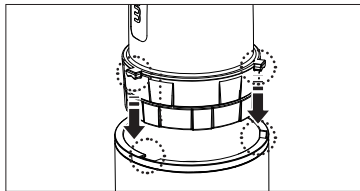


- ④ Insert the container so that the binding point marked on it is aligned with the binding point marked on the body, and then turn it clockwise until a click sound is heard.


HOW TO USE

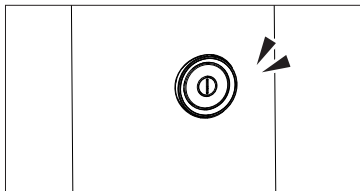


- ① Once a click sound is heard by pressing the power switch on the body, the switch becomes [ON] state and the operation begins.

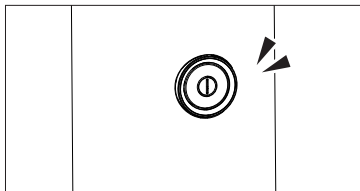

- ② After blending ends, press and hold the switch once again until a click sound is heard. Then, it goes into [OFF] state and the product is turned off.

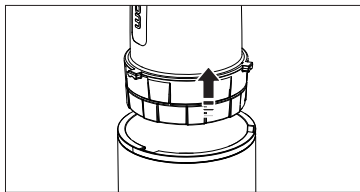

- ③ Rotate the container assembled on the body counterclockwise to detach it.

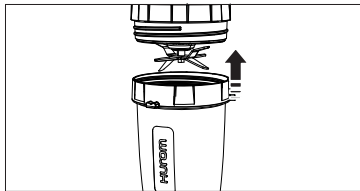

- ④ Turn the blade assembly to take it out and close the cover of the portable tumbler. You are now ready to enjoy the drink.

BEFORE REQUESTING PRODUCT REPAIR

Please check the information below before requesting repairs. For after-sales service or any inquiry you may have while using the product, please contact our Customer Service Center or website (<http://www.globalhurom.com>). When requesting for after-sales service or parts, check the manufacturer's number or barcode.

Phenomenon	How to Solve
Product does not work	Make sure that the power cord is plugged in correctly.
	Make sure to check if the blade assembly is properly assembled on the body.
Blender does not work for a long period of time	Supply of power may have been shut due to an overheated motor. Cool down the product for about 30 minutes before operating it again.
Ingredients fall out of the container before or during blending	Stop the operation and check if the blades are properly installed on the body.
Product shakes during operation	Check if the rubber at the bottom of the body properly adheres to the floor. The rubber can properly adhere to a floor only if it is a level surface.
Ingredients are stuck together and fail to be blended	Stop the operation, open the container and use a rubber or wooden paddle to stir the ingredients. Then, close the container and resume the operation.
	When inserting ingredients, make sure not to exceed the "MAX" line marked on the container.
	Also, please insert a sufficient amount of water together with the ingredients.

BEFORE REQUESTING PRODUCT REPAIR

Phenomenon	How to Solve
Blended ingredients are too fine or contain too much water	Do not run the product for an excessively long period of time. Please follow the standard usage time.
	When inserting ingredients, do not add an excessive amount of water relative to the ingredients.
Water leaks from the container	Check if the silicone rubber of the container is properly assembled. If water continues to leak, please contact the Customer Service Center.
Product does not work even when pressing the switch	Try pressing the edges of the switch several times. If the switch does not return to its original position, please contact the Customer Service Center.

PRODUCT SPECIFICATION / WARRANTY CARD

● Product Specification

Product	Blender	Power Cord Length	0.85m
Model	BL-D01 Series	Weight	2.46 kg
Rated Voltage/ Frequency	230V~ / 50-60Hz	Dimensions	W 128mm
Rated Power Consumption	900 W		L 128mm
RPM	20,000 RPM		H370mm
Standard Usage Time	1 min. 3 sec.		

● Warranty Card

1. This product has passed a strict testing process and obtained a safety certification approval from the Korea Testing Certification Institute. In case damage occurs to a consumer, compensation will be provided in accordance with the criteria for the settlement of consumer disputes notified by the Fair Trade Commission.
2. For performance and/or functional defects generated during normal usage conditions within the warranty period, we will perform free repair services, and, if a defect cannot be repaired, we will exchange the old product for a new one. In the following cases, repairs will be provided at a cost.
 - 1) A performance defect or malfunction caused after the warranty period has expired
 - 2) A malfunction caused by a consumer's intentions or negligence
 - 3) A malfunction caused by a repair performed at a place other than one of our service centers or branch stores
 - 4) A malfunction caused by an abnormality in the power use or a defect of a connecting device (regardless of the warranty period)
 - 5) A product malfunction or defect caused by a natural disaster
3. The laws of the Republic of Korea apply upon purchasing this product and, if the product is used outside Korea, no after-sales service can be requested.
4. This is a product manufactured to be compatible with the Korean voltage and frequency. When using this product in countries with voltage and frequency settings different from those in Korea, please be aware that it may lead to a reduced product lifespan and potential heat-related issues. To avoid such problems, ensure that you only use products compatible with the voltage and frequency specifications of the specific country in which you are operating the device.

Warranty Period	Warranty 1year (EU, Europe 2years) (household use only)	Product	
Seller	Hurom LS CO.,Ltd.		