 


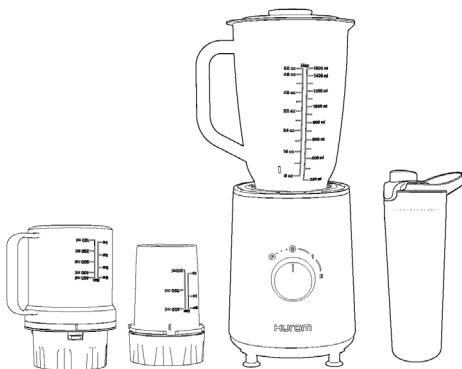

HUROM **BL-E01 SERIES** **INSTRUCTION** **MANUAL**

Safety Precautions	P02
Parts	P05
Product Specification / Warranty Card	P06
How to Assemble	P07
How to Use	P09
Recipe	P10

01. Be sure to read the Safety Precautions (P02) to ensure proper use of the product.
02. Please keep the instruction manual in a place where anyone can easily access it anytime.
03. The laws of the Republic of Korea are applied when purchasing this product and, if the product is used outside Korea, no after-sales service can be requested.
04. The specifications of this product are subject to change without notice for quality control.

SAFETY PRECAUTIONS

● Important Safety Guide

1. Before using the product, please carefully read and understand the <Important Safety Guide>.
2. "Be sure to pay attention to "Warning" and "Caution" as they are matters related to safety.

Warning

Failure to comply with the label instructions may result in serious injury or death.

- Do not touch the cord or control the dial with wet hands. It may cause electric shock and/or injury.
- This product is exclusively for 220-240V only. Connecting to a different voltage may shorten the motor's lifespan or cause a malfunction.
- Securely insert the power cord all the way into an outlet. It may cause electric shock and/or fire.
- Do not forcibly bend or damage the power cord, or place it near a high temperature or heat. It may cause electric shock and/or fire.
- Do not remodel it under any circumstances. Also, do not attempt to dismantle or repair yourself.
- Do not insert foreign objects, such as a finger or iron pin, into any cracks or holes in the product body. It may cause fire, electric shock, injury, and/or malfunction. For after-sales service and product maintenance, contact the Hurom Customer Center.
- When the power cord is damaged, do not repair or attempt to modify it yourself but, instead, contact the Hurom Customer Service Center for a professional inspection. It may cause fire, electric shock, and/or injury.
- Do not allow the product body to come into contact with water.
- Make sure that no water or foreign material gets into the product's dial.
- Do not use several electric appliances simultaneously by plugging them all into a single multi-tab power strip or outlet. Please use an exclusive outlet.
- Please avoid moving the product during operation, and do not insert hands, tools or anything other than ingredients into the container. It may cause an injury and/or accident.
- Do not use it within children's reach. Children should be carefully supervised so that they do not use this device for play. There is a risk of an injury or malfunction if children accidentally hit and knock it down.
- Those who are not familiar with the handling of this product should not use it alone.
Those who face physical and/or mental shortcomings, children, or those who lack experience and knowledge should use the product with a guardian.



Caution Failure to comply with the label instructions may result in considerable injury or damage to the product.

Do not use a blender continuously for over a minute, and, when it is used continuously, do not use it repeatedly three or more times within one minute. If the motor overheats as a result of continuous use, a safety mechanism may be activated to potentially shut off the power of the product. In such cases, detach the power cord and cool the product down for about 30 minutes before using it again.

● Precautions Before Use

- Make sure to use the product in the proper order instructed by the manual and, then, check if the product works properly.
- This product is designed in a way that it can be used only after assembling the blades and container. Do not operate it with only the blades installed on the main body. It may cause a serious injury.
- Do not use it outdoors or for a commercial purpose. This product is intended for household use.
- Use it in place with a level surface. It may cause an injury and/or malfunction.
- Make sure to use it after closing the lid.
- Before using a product for the first time, thoroughly wash all parts except the body.

● Precautions During Use

- Do not use the product in a place with risks of fire or a high humidity level. It may cause electric shock, malfunction and/or fire.
- Before operating the product, check if any liquid leaks out from the container. In case ingredients leak out, reassemble the container.
- Do not use hot ingredients that are 60°C or higher in temperature. There is a risk of an injury from a burn, etc. caused by overflowing of the liquid.
- When using frozen ingredients, pour a proper amount of water as well. When operating a product with only frozen ingredients, blades may not rotate properly and there is a risk of a damaged container due to the contents.
- When taking out ingredients from the container, use a tool such as a paddle. If hands are inserted into a container, the blades may cause an injury.
- If the motor stops and a loud, "whirring" sound of an idle operation is heard during use, it means that large or tough ingredients are stuck on the blades. Therefore, remove them and cut them into smaller pieces before running the product again.
- Do not insert ingredients in excess of the rated capacity. It may overwork the motor and cause a malfunction.
- Do not poke any crack or hole of the product with a chopstick, spoon or fork or insert any foreign objects during use. It may cause an injury and/or malfunction.
- While the product is in operation, do not lift the container or open the cover.

- Do not conduct any idle operation of the product. It overheats the motor to shorten the product's lifespan and may also cause a malfunction.
- Do not exert any excessive shock to or drop the product. It may cause electric shock, damage and/or fire.
- The smell of rubber generated during operation is not considered to be a malfunction of the product, and it is rather a smell of the substance coated on the motor coil. The smell will go away after a few operations so you may feel safe when using a product.
In such cases, however, you should not use it continuously for over a minute.
- Use a container that suits your needs.
 - Smoothie or juice: Juice container / - Grinding of beans or nuts: Grinding container / - Mincing garlic and vegetables: Mincing container
- Do not store ingredients in a container for a long period of time. Ingredients may become fermented to apply pressure inside a container.
- Do not blend a hot liquid or foamy carbonated drink.
It may increase pressure inside the container to cause a burn and/or injury.

● Precautions After Use






- Remove the power cord from the outlet at all times after using the product. When the product is cleaned or not in use, make sure to pull the power cord after turning the power button off. Also, when removing the power cord, make sure to grab the plug to pull it. Removing by grabbing the cable may cause a malfunction, injury, electric shock and/or fire.
- Detach the container after the operation finishes completely.
- Do not pour water on the product to wash it. It may cause a malfunction of the motor or dial or an electrical accident.
- Do not insert the container, cover and other parts into hot water of 60°C or higher in temperature. It may cause a deformation of or damage to the product.

● Cleaning and Storage

1. Since the main body cannot be washed with water, wipe it with a damp towel or soft cloth.
2. All parts except the body of the blender can be washed and cleaned with water.
3. After cleaning the parts, dry them completely.
4. Be careful with blades during cleaning as they are extremely sharp.
5. Once cleaning finishes, make sure to install the blade assembly on the container again for storage.
6. In case of discoloration, use a towel, apply some baking soda or lemon juice on it, and wipe gently.


Afterwards, wash it with clean water and then wipe it with a dry towel.

PARTS

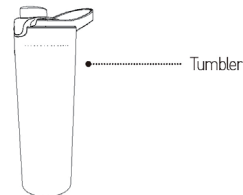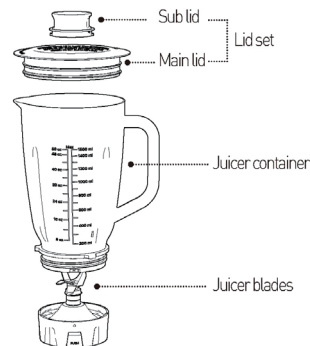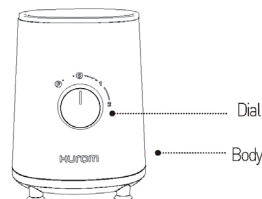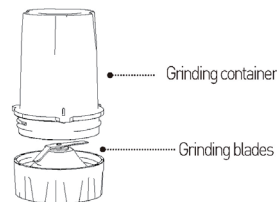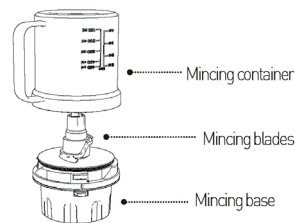


HOW TO ASSEMBLE


Assembling juicer container + lid set

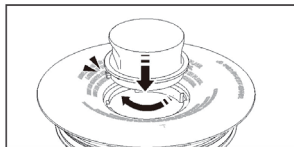

Assemble the bump on the sub lid in the groove of the main lid, and then turn it clockwise to fasten. Press the lid set assembled all the way down into the container. To detach, turn the sub lid counterclockwise.

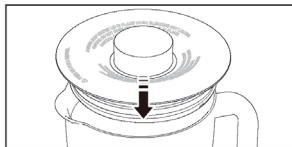


Assembling juicer container + juicer blades

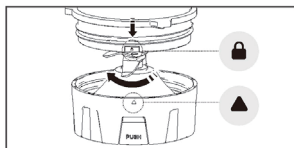


Rotate the ▲ symbol of the blades until the 🔒 symbol of the container to assemble, and then press the PUSH button to fasten.


Assembling grinding container + grinding blades

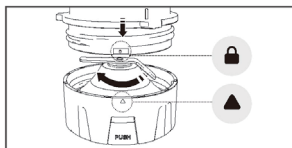

Assembling juicer container / grinding container + body

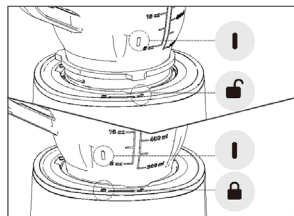


Align the | symbol of the container with the 🔒 symbol of the body for assembly, and then turn the container until | and 🔒 align and a click sound is heard.

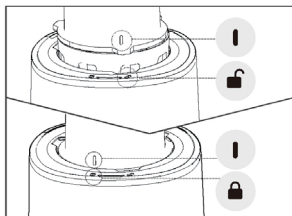


HOW TO ASSEMBLE

Assembling mincing blades + mincing base

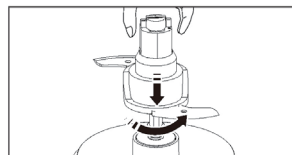


Rotate the mincing blades counterclockwise to assemble them with the mincing base and, to detach, simply turn it counterclockwise.

Assembling mincing container + mincing base

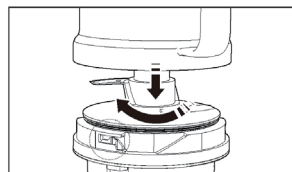

After assembling the blades, rotate the container clockwise all the way until it is assembled with the binding mechanism of the mincing base. To detach, turn the blades counterclockwise.

Assembling mincing container + body

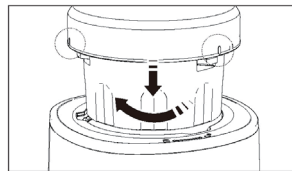


Align the | symbol of the container with the 🔒 symbol of the body for assembly, and then turn the container until | and 🔒 align and a click sound is heard. To detach, turn the container counterclockwise.



If it is assembled correctly, the locking pin of the container base should be facing upward. To detach from the body, turn the container counterclockwise.

HOW TO USE

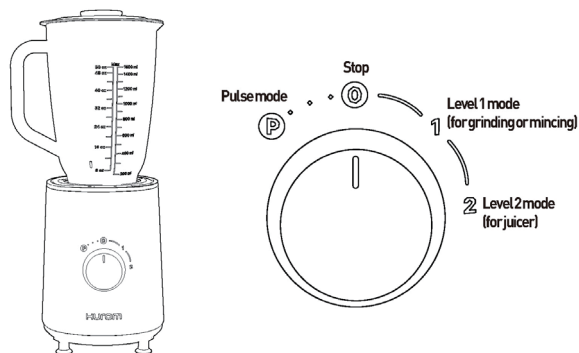

P: Pulse mode (instantaneous operation) | 0: Stop | 1: Level 1 mode (for grinding or mincing) | 2: Level 2 mode (for juicer)

1. Make sure that the dial is in the "0" position, and then connect the power.
2. Turn the dial to a desired speed and start blending, grinding or mincing.
3. Turn the dial to "1" or "2" to be able to change the rotating speed.
Please use the grinding container in Level 1 mode. It is recommended to use the juicer container and mincing container in Level 2 and 1 modes, respectively.
4. To use the Pulse mode, repeatedly rotate the dial to the left as many times as you want. The Pulse mode is used when grinding large or hard food ingredients, and an efficient way is to operate it instantaneously in short repetitions.
When you turn the dial to the left and then release it, the Pulse mode stops immediately.
5. After the operation is over, return the dial to the "0" position. Detach the container from the body and then pour the contents into the container.

RECIPE

Containers	Name	Cooking method	Operating mode	Time
Juicer container	Apple carrot juice	200g of apple + 100g of carrot + 200g of water + 100g of ice	Level 2	40 sec.
	Apple spinach juice	200g of apple + 50g of spinach + 200g of water + 100g of ice	Level 2	40 sec.
	Blueberry smoothie	200g of blueberries + 300g of milk + 50g of water	Level 2	40 sec.
Grinding container	Coffee beans	30g of coffee	Level 1	30 sec. (coarse powder) 60 sec. (fine powder)
	Rice	30g of rice	Level 1	30 sec. (coarse powder) 60 sec. (fine powder)
Mincing container	Garlic	150g of garlic	Level 1	5 sec.
	Ground meat	200g of pork/ beef/ chicken	Level 1 or 2	15 to 20 sec.
	Vegetables	150g of carrot	Level 1	10 sec.

HUrom